

---

# 8. Installation Instructions







## Section Contents




 

Title	Page
8.1. Required Parts .....	8-3
8.2. Unpacking .....	8-4
8.3. Docking Procedure .....	8-5

This page intentionally left blank.

## 8.1. Required Parts

The PUNCH G3 is shipped with an installation kit containing the following components.

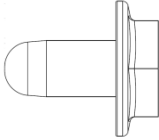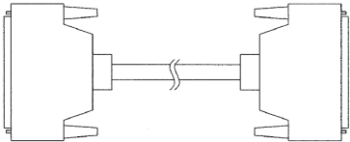No.	Description	Picture	Qty
1	Power Cord (US)		1
2	Power Cord (UK)		1
3	Power Cord (EU)		1
4	Power Cord (Swiss)		1
5	Screw, Round tip, M4 x 8		12
6	Cable Assembly, Interface (37 pin)		2

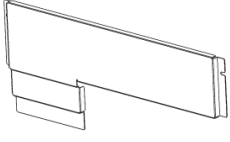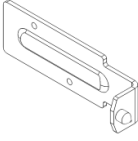7	Cover Plate, MK737 Cables		1
8	Docking Bracket, Rear		2
9	Docking Bracket, Lower Front		1
10	Docking Lock, Lower Front		1
11	Docking Bracket, Upper Front		1

## 8.2. Unpacking

Remove plastic wrap and straps from the package using a cutting tool




Remove the tape holding the plastic bag closed and pull back the bag exposing the casters



Lift of the lid and remove the installation kit and set it aside, it contains the items in section 1



Cut the corners of the lower box and with two people slide the punch so that the wheels overhang the edge

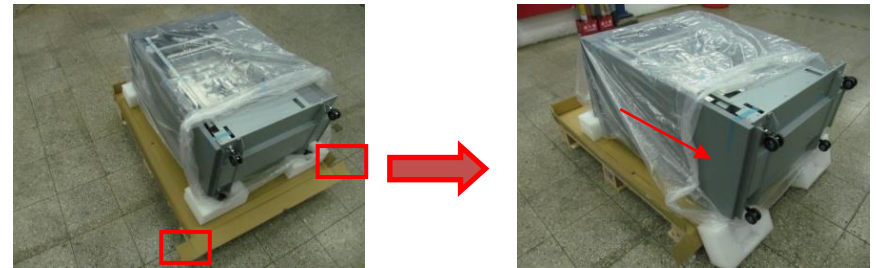


Remove the four inner and 4 outer corner guards and then lift the shell straight up to remove it



With two people, lift the punch holding the top cover so that it stands upright on the casters




Remove the plastic cover, tape, and foam from all locations

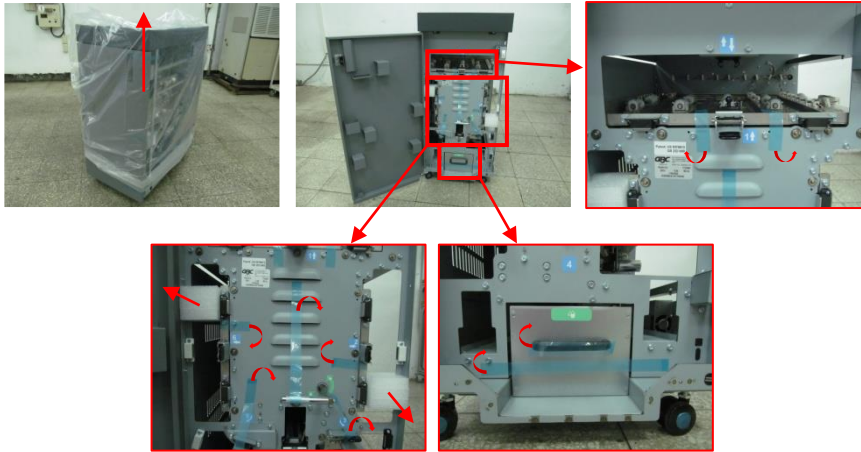


### 8.3. Docking Procedure


Before docking the machine, adjust the casters so that the paper path is the same height as the upstream unit (710.5mm from ground) and the top of the machine is level.

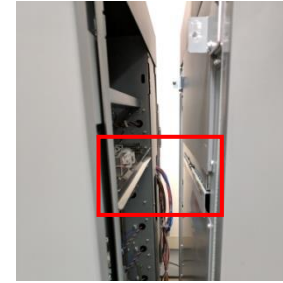

To adjust the casters, loosen the top nut on the caster, and rotate the wheel by hand. Clockwise to lower, counterclockwise to raise. Once the desired height is achieved, tighten the top nut to secure the caster.

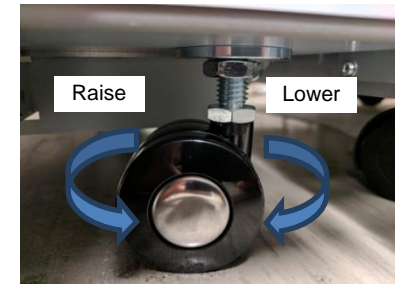

Install the front and rear docking brackets (Items 8, 9, and 11), on the upstream device. Note the rear docking bracket is the same part upper and lower.

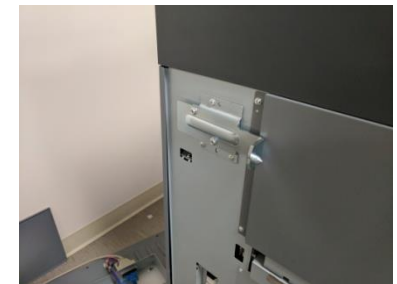

Item 8



Item 9



Item 11

Push the PUNCH G3 directly upstream so that the brackets slide into the openings



The upstream docking brackets should align with holes in the PUNCH G3




Once the brackets are aligned with the holes in the PUNCH G3, push the punch back so that it engages the alignment pins. Install item 10 in the lower right front bracket and secure the upper bracket using a M4 screw.






Remove the two M4 screws from each spacer. The spacers are held to the PUNCH G3 with adhesive and should remain in place. Use these screws to secure the brackets provided with the downstream device. See the Konica Minolta Installation manual for more details.

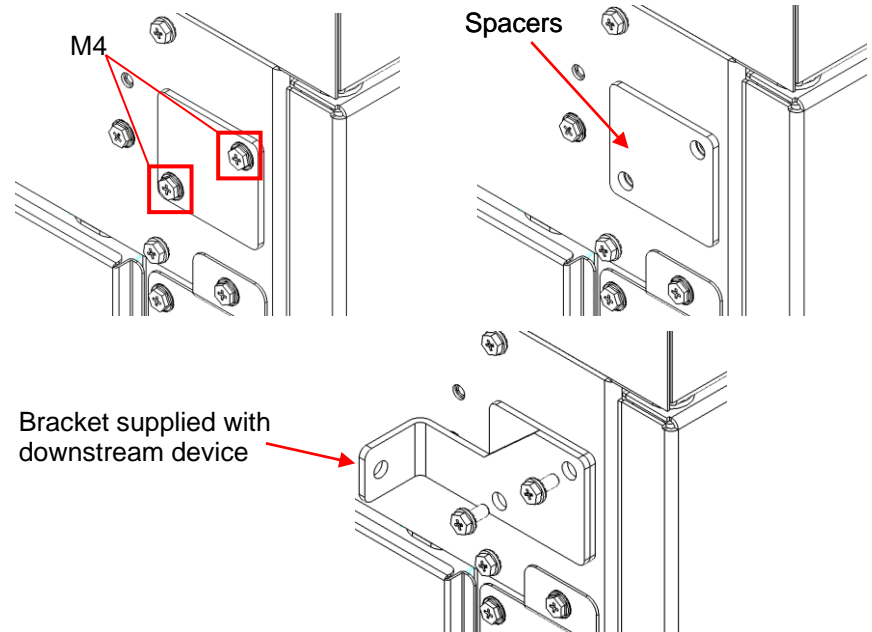

The PUNCH G3 comes with four spacers installed for the mounting of the downstream brackets.

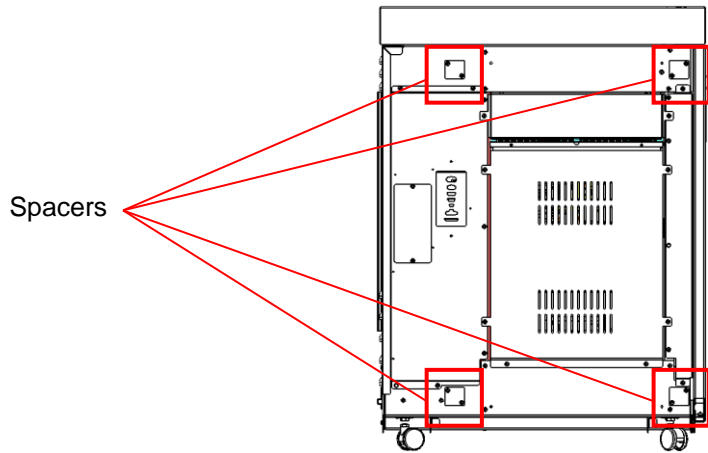

See the Konica Minolta installation manual for cable connection instructions.